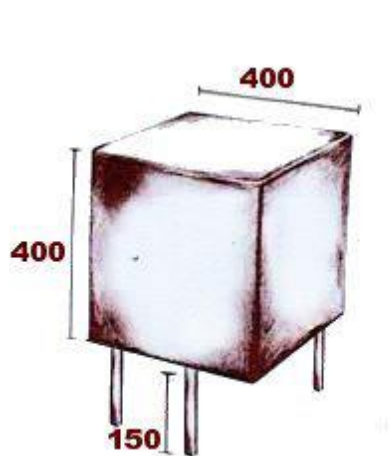


Substructure

The substructure must be frost-stable and level.

**Installation**

Install EUROFLEX® cube by inserting optional steel mounting anchor into a prepared fresh concrete bed (grade C12/15) located over a stable-bearing substructure.

Cubes can be also glued on a surface like EUROFLEX® Slabs or other rubber surface.



To avoid colour variations due to differences in sunlight exposure, leave the UV protection film on the product as supplied until just prior to installation.